

CORVETTE STINGRAY AND ZO6 PERFORMANCE DATA RECORDER QUICK REFERENCE GUIDE

The Performance Data Recorder (PDR), available on 2015 Corvette Stingray and Corvette Z06 models, allows you to record, share and analyze your driving experiences on and off the track. For full details on how it operates, see the 2015 Corvette Owner's Manual or see your Chevrolet dealer.

1. INSERT YOUR SD CARD

TO BEGIN, INSERT AN SD CARD INTO THE GLOVE BOX SD CARD READER (OWNER'S MANUAL: 7-1)

- FAT32 Formatted and Class 10 (8GB, 16GB or 32GB recommended)
- Recorded data is not stored anywhere else and is only accessible from the SD card

Please note: It is recommended that a blank SD card be used for Valet Mode or normal recording.

2. CUSTOMIZE YOUR LOOK

CHOOSE THE VIDEO OVERLAY (OWNER'S MANUAL: 7-4)

Press the PDR icon to access the PDR menu. The PDR offers four video overlay options ("Sport," "Track," "Performance Timing" and "No Overlay") with numerous graphics and metrics available based on your drive.

1. Press the "Choose Video Overlay" screen button to display the menu screen



PDR Menu Screen

2. Select "No Overlay," "Sport," "Track" or "Performance Timing"



Sport overlay

3. RECORD YOUR DRIVE

START RECORDING (OWNER'S MANUAL: 7-2)

If the system is unable to begin recording, the "Start Recording" button will be grayed out.

- 1. Press the "Start Recording" button to begin recording
- 2. After recording begins, this button changes to "Stop Recording" and can be pressed to stop the recording session (this should be pressed before removing the SD card or turning off the vehicle)

Please note: If no SD card is inserted, you will receive a message telling you to insert the card. If there is no available space on the SD card, a message displays. You can delete or transfer recordings on the SD card or use another SD card with free space to continue.



CORVETTE STINGRAY AND ZO6 PERFORMANCE DATA RECORDER QUICK REFERENCE GUIDE (CONT.)

4. RECORD YOUR LAP TIME

SET A FINISH LINE (OWNER'S MANUAL: 7-3)

To track and record your vehicle's lap times on a racetrack, the starting point of a lap must be set. Crossing this point activates the lap timer when recording.

- 1. To set the finish line, position the vehicle with the front bumper at the start/finish point
- 2. From the PDR menu, press "Mark Finish Line" (this can be done with the vehicle moving and the system will remember this position until it is overwritten)



5. WATCH YOUR RECORDED SESSIONS

VIEW YOUR VIDEOS (OWNER'S MANUAL: 7-3)

To view recorded videos (when the vehicle is in Park), press "Recorded Sessions." A list of records will display. Select the recording to start playback.

- Video Scrubber can be used to change the position and playback of your video (this feature can be accessed by touching the lower part of the screen)
- Delete Recording (X icon) press to delete the video
- Pause/Play Press to play or pause the video (you must use the screen, the hard back button is not active with PDR)
- Back Press to display the previous screen
- Exit Press to exit the current display

6. ANALYZE YOUR DRIVING TECHNIQUE USING THE COSWORTH TOOLBOX SOFTWARE

You can analyze your driving technique by using easily downloadable Cosworth Toolbox software that is similar to the analysis software used by Corvette Racing.

Locate the Cosworth Toolbox Software:

- Cut and paste the following URL into your web browser: http://www.chevrolet.com/corvette-stingray/performance-datarecorder.html
- Scroll down and click on the "Download" button

OR

Cut and paste the following URL into your web browser: www.cosworth.com/toolbox

You will need to enter your name and email address in the "Registration & Download" section on the page (a link will be sent to you to download the software). This page also includes a tutorial with basic steps on how to use the software.



CORVETTE STINGRAY AND ZO6 PERFORMANCE DATA RECORDER QUICK REFERENCE GUIDE (CONT.)

7. SET YOUR VALET MODE PREFERENCES AND ENTER YOUR CODE TO BEGIN RECORDING

VALET MODE ALLOWS RECORDING PREFERENCES (OWNER'S MANUAL: 7-7)

Available choices are:

- To begin recording in Valet Mode, you must select (and remember) a four-digit code that can be entered on the Settings page (accessible from the main PDR menu page) the audio system, glove box and center storage console will be locked and video recording outside of the vehicle will occur when the vehicle is running until the code is re-entered
- Automatically record the exterior view of the vehicle (enables the PDR to begin recording as soon as the vehicle is in Valet Mode)
- Overwrite existing data when memory is full (allows manual overwriting of previous recordings, one at a time starting with the oldest, when the current recording requires additional storage to continue)